

# Easy Hang Ventilated Shelving Assembly and Installation Guide

Please read all of the instructions before beginning assembly and installation.

## Basic Tools For elfa® Assembly and Installation



Level



Hand or  
Power Drill




#2 Phillips Head  
Screwdriver



Drill Bits  
1/8"/3mm, 5/16"/8mm  
& 3/8"/10mm



# 2 Phillips  
Head Bit



Tape  
Measure



Ladder or  
Step Stool

## Easy to Install!



Place the Hang Track  
at ceiling height or  
door height.



Hook the Hang  
Standards on the  
HangTrack.




Snap in the Closet  
Rods and Shelves.




Position the Drawer  
Unit in the closet.

## Easy Hang Ventilated Shelving Components

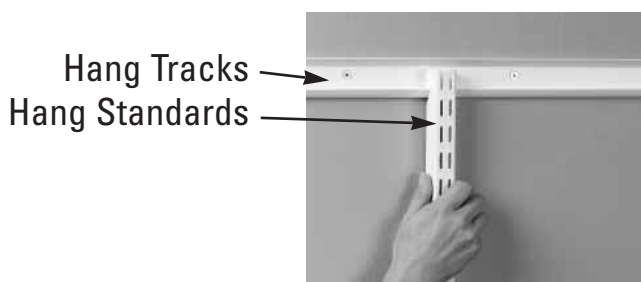

Hang Tracks  
Hang Standards

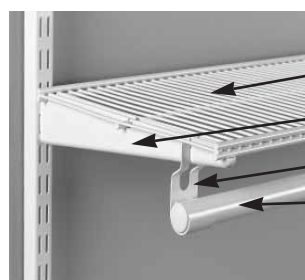

Ventilated Shelves  
Ventilated Shelf Brackets  
Closet Rod Holders  
Closet Rods

# elfa® Easy Hang Installation

## Hang Track

### Step 1 *Position the Hang Track:*

It is usually placed at ceiling or door height, but may be placed at any height.

### Step 2 *Level the Hang Track:*

a) Place Hang Track at desired height, mark one hole in the middle, and take the Hang Track down. b) Begin drilling this hole with a 1/8"/3mm drill bit. If you hit wood, continue drilling the entire length of the bit. If you hit the hollow part of the wall, enlarge the hole with a 3/8"/10mm drill bit for the hollow wall anchors. c) Put the Hang Track up with one screw and tighten it enough to hold the Hang Track against the wall. d) To keep the Hang Track level while you mark all of the holes, place a level on the bottom of the Hang Track and adjust it as required. e) Take the Hang Track off of the wall.




### Step 3 *Drill all marked holes:*

a) Drill holes with a 1/8"/3mm drill bit, assuming you are going into wood. If you hit wood, continue drilling the entire length of the bit. b) If you hit the hollow part of the wall, mark those holes with an X, reminding yourself you need to go back and drill a 3/8"/10mm hole for the hollow wall anchors. c) To install a hollow wall anchor (dark blue), remove the screw from the anchor. Tap the dark blue anchor into the 3/8"/10mm hole in the hollow part of the wall. Remove and discard the gray spacer.

### Step 4 *Install the Hang Track:*

Put the Hang Track up and insert and tighten all the screws. a) For the wood screws, discard the light blue anchor and use a #2 Phillips head screwdriver bit and power drill to tighten the screw. Pulling the wood screw over a bar of soap before using it will make inserting the screw into the wood easier. b) For the hollow wall anchors, use a #2 Phillips head screwdriver and tighten the screw. It is important to get this anchor very tight!! You will tighten this anchor until the screw stops turning. Once the Track is tight against the wall, you're finished.

## Types of hardware and their applications are explained below.

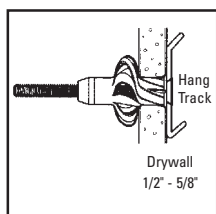


### Hollow wall installation (G5)

Used for 1/2"/10mm or 5/8"/17mm thick drywall.

Use 3/8"/10mm drill bit to drill hole. Insert dark blue anchor, remove and discard the gray spacer.

Use # 2 Phillips head bit to tighten the screw.

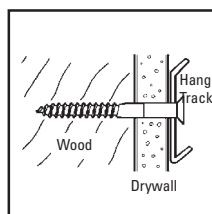


### Wood installation (R6)

Used for mounting into drywall over wood studs or directly into wood.

Use 1/8"/3mm drill bit to drill a pilot hole the length of the bit. Discard anchor.

Use #2 Phillips head bit to tighten the screw.

## Other Installation Hardware for Special Wall Construction

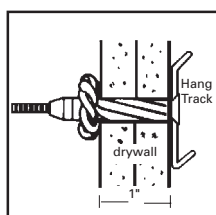


### Hardware for 1"/18-30mm thick walls (G6)

Used for 1"/18-30mm thick plaster or drywall.

Use 3/8"/10mm masonry drill bit to drill hole. Insert red anchor, remove and discard the gray spacer.

Use #2 Phillips head bit to tighten the screw.

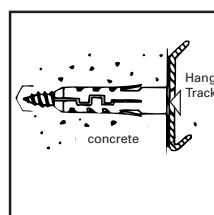

### Hardware for masonry walls (R6)

Used for mounting into masonry walls, concrete, brick, etc.

Use 5/16"/8mm masonry drill bit to drill hole. Insert light blue anchor.

Use #2 Phillips head bit to tighten the screw.

# Ventilated Shelving Assembly

## Step 1

Install the Hang Track (see page 2).

## Step 2


Hanging Standards should be placed at a maximum of 36"/900mm apart in closets, 24"/600mm apart for storage of heavy items (Fig. A).



## Step 3

Place Ventilated Shelf Brackets in the Hanging Standards at the desired Shelf height (Fig. B).

Snap the Closet Rod Holders into their slots in the Brackets (Fig. C).

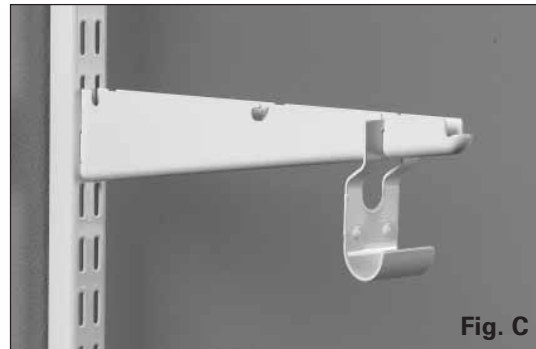

## Step 4

Place Shelf wires over notches in the Ventilated Shelf Bracket. The end of the Shelf should extend 1/2"/10mm past the side of the Bracket. Lock the Shelf into place by pressing the middle part down and toward the wall (Fig. D). To unlock the Shelf, lift the back out of the slot and pull away from the wall. Snap the Closet Rods into their Holders (Fig. E).

